



INSTALLATION



1


The hole has to be drilled according to the tolerance ± 2

2

Press seal in the hole without lubricant. Make sure that the seal is fully pushed in.

3

The end of the pipe should be lubricated. Push pipe into the seal. Make sure that pipe is pushed in at least 50 mm.

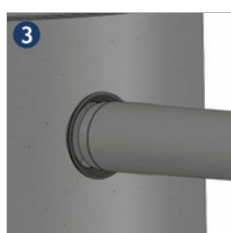

NOTE

SealiT Manhole Connection Seals are used for flexible connection between pipes and manholes. Storage in a dry place at a temperature above 0°C.