




INSTALLATION

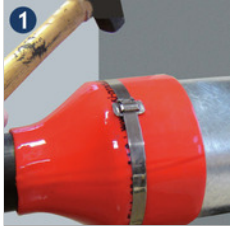

1
Pull sleeve over the carrier pipe and the casing pipe. The edge of the casing pipe should be chamfered. Install the first strap about 15 mm in front of the end of the casing pipe.

2
Inject the adhesive included in the delivery all round underneath the sleeve.

3
Then install the second strap. Spread leaking adhesive, if necessary.



4
Align the sleeve on the carrier pipe elongated (figure a) or S-shaped (figure b) depending on the extension direction. Then install the first strap about 15 mm away from the rear end.

5
Inject the adhesive underneath the sleeve the way you did with the casing pipe side and install the second strap. Spread leaking adhesive, if necessary.

6
Finally, the sleeve has to be protected by means of an expansion pad.

